SLC RF Remote Table RGB


Important: Read All Instructions Prior to Installation

Function introduction

Rotate the knob counterclockwise:

- 1. Decrease light intensity from 100% to 1%(brightness mode).
- 2. Change RGB color (RGB color mode)



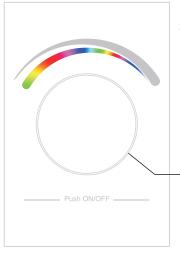


Rotate the knob clockwise:


- 1. Increase light intensity from 1% to 100%(brightness mode).
- 2. Change RGB color(RGB color mode)



Click the knob to switch ON/OFF. Press and hold down to adjust brightness to 100%. Double click the knob to switch between RGB color mode and brightness mode.

Front side

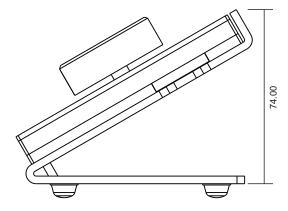

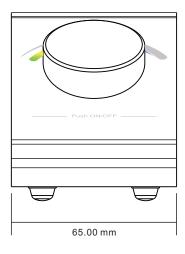

Product Data

Output Signal	RF signal
Power Supply	3V(CR2025)
Power consumption	10 mA
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	96x65x74mm

- Rotation sensitive
- Compatible with all universal series RF receivers, radio frequency: 869.5MHz
- · Control RGB color
- · Control 1 zone of RF receiver
- Waterproof grade: Ip20

Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

Operation

Pair with RF receivers:

Click "Learning Key" \rightarrow Rotate or click the knob \rightarrow RF receiver will flicker once \rightarrow The receiver is paired with on RF receiver will flicker once

How to delete the pairing:

Press and hold down "Learning Key" on the receiver for over 3 seconds until connected LED lights flicker twice, which means the pairing is deleted successfully.

Installation

