#### Time switch

### PDSU21SN


#### 05104710



## Safety notes

This product should preferably be installed by a qualified electrician. Non-compliance may result in a fire hazard or electric shocks. Before installation, read the operating instructions and observe the product-specific requirements for the installation location. Use only original spare parts for repair and maintenance. All products may be opened and repaired only by specially trained personnel. Unauthorised opening and repair by other persons will invalidate all claims for liability, replacement or warranty services.


The device contains a LiMnO2 primary cell. When the product reaches the end of its life, this cell must be correctly removed and disposed of in accordance with national legislation and the requirements of environmental protection.

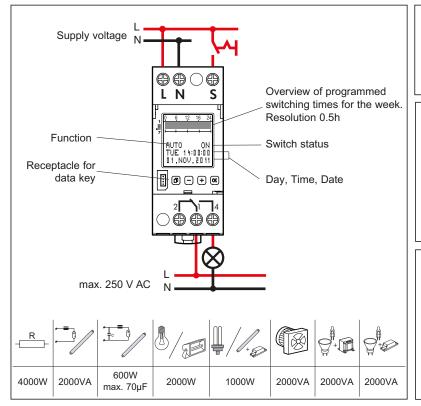



Operating principle: Type 1.B. S. T. IEC/EN 60730-1, IEC/EN 60730-2-7 Montage: in distribution panel, Degree of contamination: 2 Switch output, potential-free Rated impulse voltage: 4 kV

#### General information

- Start-up: after applying the supply voltage, the time switch starts automatically with the last selected function. The relay position is set by the current program.
- Battery backup
- Backlighting not active
- Data key READ/WRITE only via the menu
- Select menu, back to main menu, Hold down > 1s = operating display
  - Confirm selection or load parameters
  - + Select menu options or set parameters

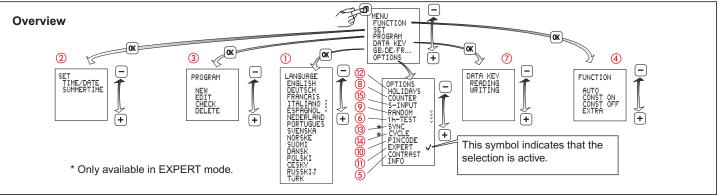

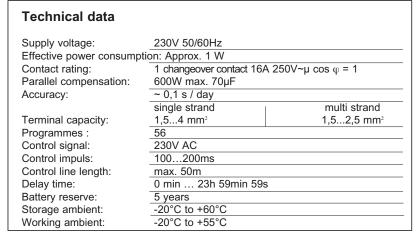

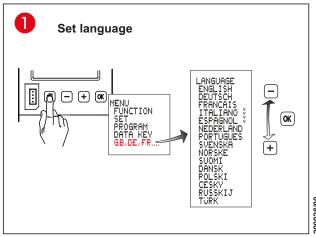


# 2

#### Set time/date, summertime/wintertime

Summertime: ± 1 hour Europe: Factory set

**SPECIAL:** The switchover to/from summertime can be freely programmed by entering a start date and end date and is then executed each year on

the same day of the week, e.g. Sunday.

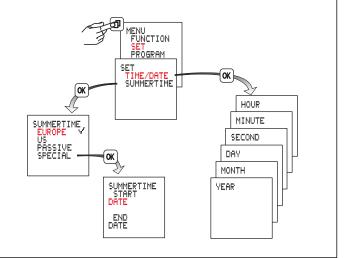


# 3


## **Programming**


A program consists of an ON time, OFF time and associated on and off days.


Programs with predefined on/off days (Mon to Sun, Mon to Fri and Sat and Sun): for these programs, you only need to set the switching times. With the "INDIVIDUAL" option, you can allocate switching times to specific days of your choice.


The programs of a channel are combined with a logical OR.

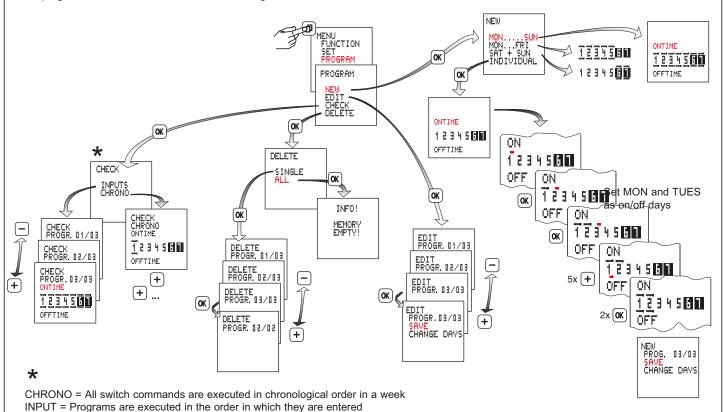


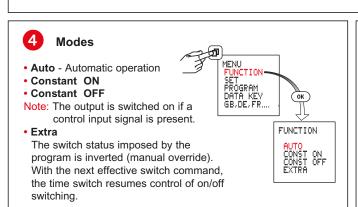


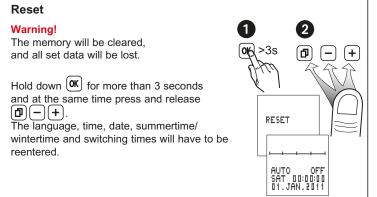


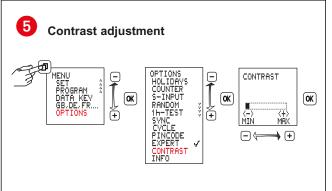

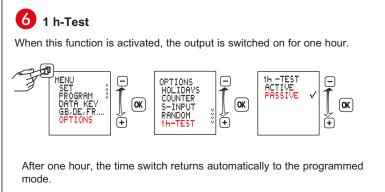

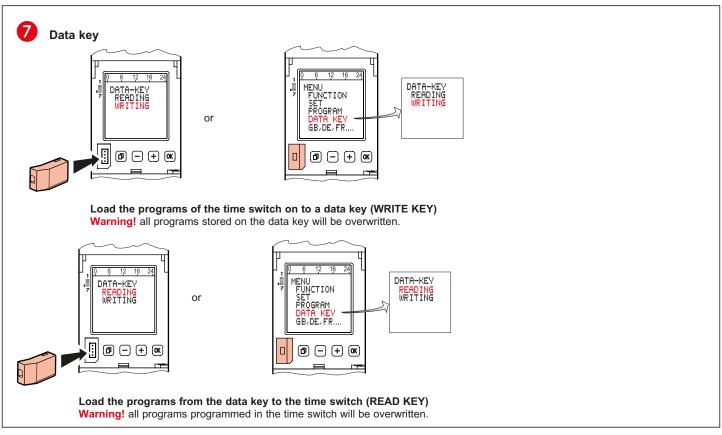


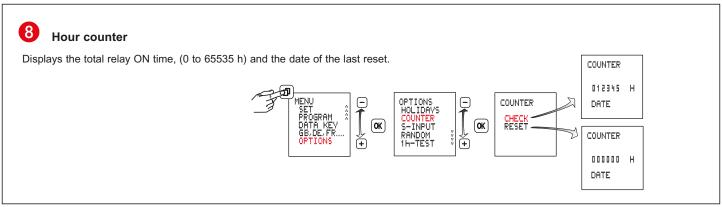

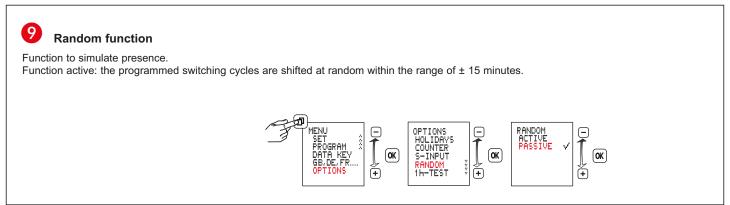



PIN CODE active: The menus of the time switch will not be accessible unless the PIN CODE has been entered. When the pin code is active, access to the button and key functions is disabled 1 minute after the last button press. PIN free access can be re-enabled by selecting PASSIVE or by resetting the device.





# **Expert mode**

Some additional functions are available in Expert mode:

- · Power grid synchronisation to improve the accuracy
- · Cycle function




Note: Upon switching from ACTIVE to PASSIVE the additional menu items are hidden again and all the Expert mode settings are cancelled. After re-activating, Expert mode will operate again with the basic settings.



# Holiday

After activation the holiday program is executed between 0:00h on the start date and 24:00h on the end date (Constant ON/OFF). After the holiday program has run once, it must be reactivated.

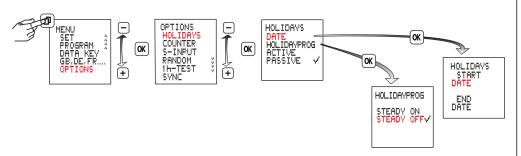




# Activating and deactivating grid synchronisation

Only available in EXPERT mode.


The default setting is PASSIVE. In order to improve the long-term accuracy, it is advisable to activate synchronisation if the time switch is supplied from a on 50/60 Hz grid with frequency adjustment.






For cyclical switch commands the switching on time is set by logical "OR" of programs of all types. A fixed cycle of ON and OFF time then operates within those limits. The cycle always starts with the ON time.

The cycle duration and the ON time within the cycle are the same length for all switching times. The cycle duration and the ON time can be set independently in one-second increments. If the switching time is shorter than the cycle duration, the cycle will be shortened accordingly. The ON time will remain unchanged. If the switching time is actually shorter than the ON time, the ON time will be shortened accordingly.

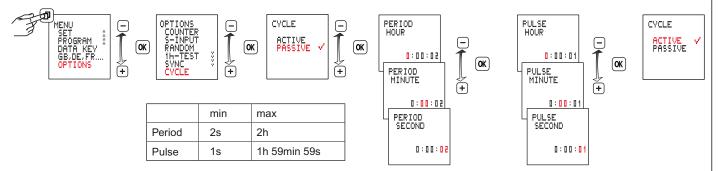


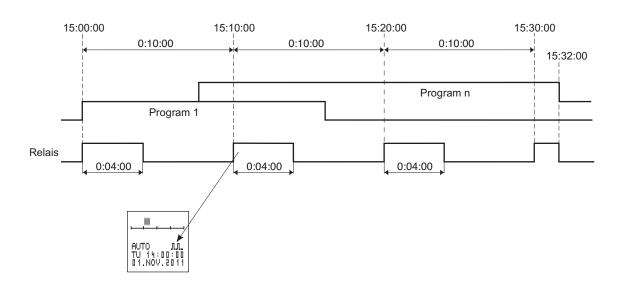



# Control input with delay time

A control signal is superimposed on all program commands (OR circuit). While this control signal is applied, the output is switched ON. When the control signal is switched off, the output is switched OFF after a delay time, unless an ON command is applied by a program.

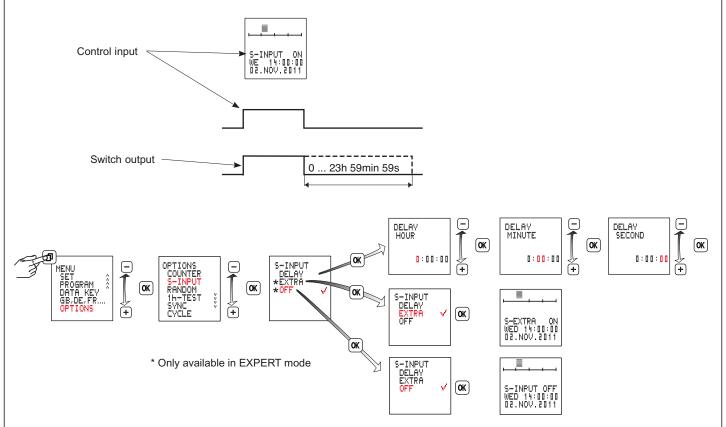

#### **DELAY**

The output switches on when the control input is activated and remains switched on for the duration of the set delay time after the control input has been deactivated. Delay time setting range 0h 00min 00s ... 23h 59min 59s. The control input can be subsequently triggered within the delay time.


### **EXTRA**

The control input signal inverts the switching state specified by the program. At the next valid switching command the time switch resumes switching On and Off.

### **OFF**

The control input signal sets the switching state to OFF if the program specifies ON.

Warning: Elektrical shock - Disconnect all power from the device before dismantling the module and replacing the battery. Always use a Li cell type battery (LiMnO<sub>2</sub>) CR2477, 3V high temperature type min +85 °C

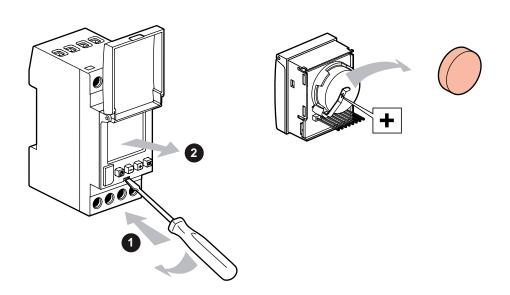

PROTEC Produktmanagement Ludwig-Erhard-Straße 21 - 39 65760 Eschborn www.protecclass.de